


# ***GR*reddy**®



**Instruction Manual** P/N: 12569001

Make: **Subaru** Model: **Impreza WRX STi** Year: **2008-2012** Engine: **H4-2.5L (t)**

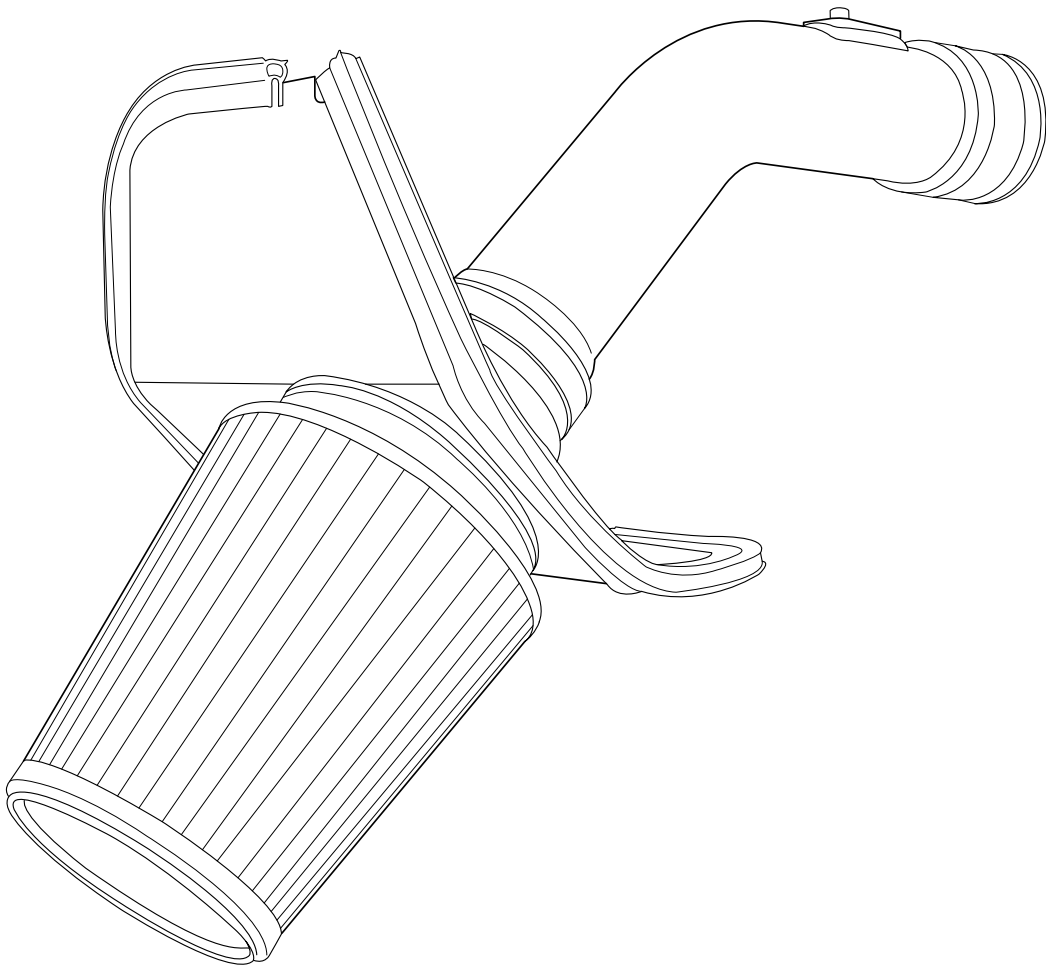

- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support at 949-588-8300.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.
- Disconnect the negative battery terminal before proceeding.
- Retain factory parts for future use.

Label	Qty.	Description	Part Number
A	1	Pro Dry S Air Filter	61-90135
B	1	Housing	05-T4301B2
C	1	Intake Tube	05-T4301P1
D	1	Hump Coupling	05-00564
E	1	Straight Coupling	05-01029
F	2	Clamp #44	03-50019
G	2	Clamp #48	03-50007
H	1	Adaptor	05-01037
I	2	Trim Seal (1-17") (1-20")	05-00072
J	3	Button Head Screws	03-50102
K	2	Cheese Head Screws	03-50030

Installation will require the following tools:

Flat head & Phillips screwdriver, Vice grip, Pliers, 8mm socket, 10mm socket, Ratchet & 5/16 nut driver.

Note: Legal in California for use on race vehicles only. The use of this device on vehicles used on public streets or highways is strictly prohibited in California and others states that have adopted California emission regulations.





Figure A

**Refer to Figure A for step 1**

Step1: Remove the two clips (1) off the air duct and remove air duct (2). Loosen both clamps (3) on the stock intake tube (4) and remove tube. Unplug the mass air sensor (5).



Figure B

**Refer to Figure B for step 2**

Step 2: Remove the mass air sensor (5). Unclip and Remove this part of the stock air box. Remove the two 10mm bolts (located inside the air box) and remove the remaining part of the stock air box out.



**Refer to Figure C for step 3**

Step 3: Remove the bracket holding the stock air box with a 10mm. Do not discard the bolts as you will reuse them.



**Figure D**

**Refer to Figure D for step 4**

Step 4: Install the filter adapter with the provided hardware to the housing, along with the seal trim, coupler, clamps and filter. Install on vehicle.



Figure E

**Refer to Figure E for step 5**

Step 5: Preinstall coupling to intake tube along with clamps and mass air sensor.





Figure F

**Refer to Figure F for step 6**

Step 6: Install tube with coupler onto the compressor inlet tube (6). Re-connct wire harness to Mass air sensor. Install is complete.

Pro DRY S Air Filter



P/N: 61-90135

To purchase any of the items above, view airflow charts, dyno graphs, photos, and video; please go to [Greddy.com](http://Greddy.com).

Page left blank intentionally

***GR*Reddy®**

***GR*Reddy Performance Products**  
9 Vanderbilt, Irvine CA 92618  
TEL: 949.588.8300 • Tech@greddy.com